




M'LinkX

Roof Rack Platform

INSTALLATION USER GUIDE

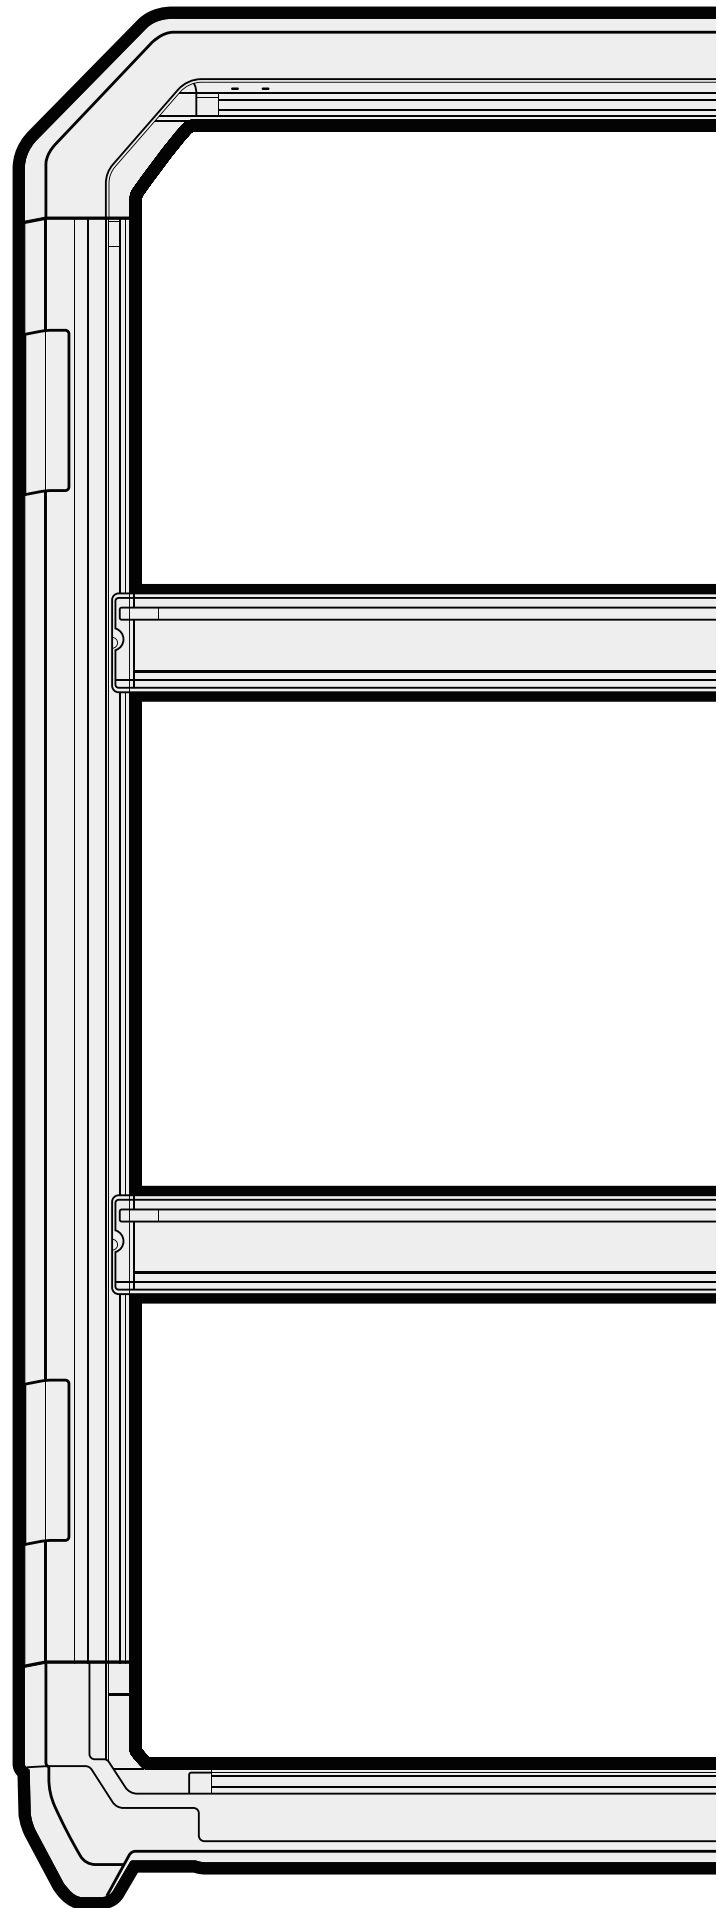

Important Safety Notice

To reduce risk, read and follow this manual before installation and use.

⚠ Safety Precautions

- Ensure all components and mounting brackets are properly installed and tightened before driving.
- Keep installation tools in the vehicle and check fasteners regularly, more often on rough roads or long trips.
- Do not exceed vehicle limits or the product's rated load. Total weight includes the product, brackets, and cargo.
- Distribute cargo evenly and keep the center of gravity low.
- Adjust speed according to load and road conditions. Maximum 120 km/h, and 10 km/h over bumps or rough surfaces.
- Do not modify the product.
- Take care during installation and removal.
- Do not jump on the roof rack or engage in unsafe activities.
- Maintain clearance from the sunroof. Some vehicles may not allow sunroof operation after installation.
- Follow instructions and local laws. Manufacturer is not responsible for damage from misuse.


⚠ Maintenance Guidelines

- Clean only with water or approved car wash products. Avoid alcohol, gasoline, bleach, or strong chemicals.
- Remove the roof rack if unused for long periods. Clean and dry before storage.
- Check components regularly and replace any damaged parts.
- Do not overload. Overload damage is not covered by warranty.
- Surface wear, scratches, or discoloration from use or installation are not covered by warranty.





Off-road conditions are more demanding and require more frequent inspections. Use extra caution on unpaved roads.



Use and Load Guidelines

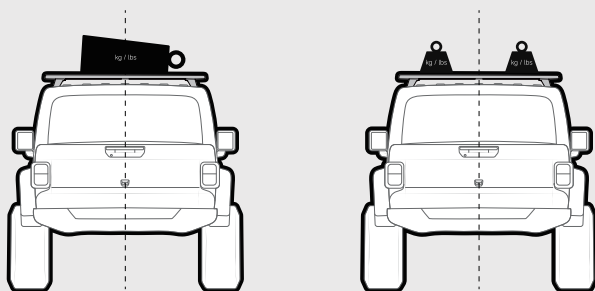


Loading: Keep a low center of gravity, distribute weight evenly, and maintain clearance from the sunroof and antenna.

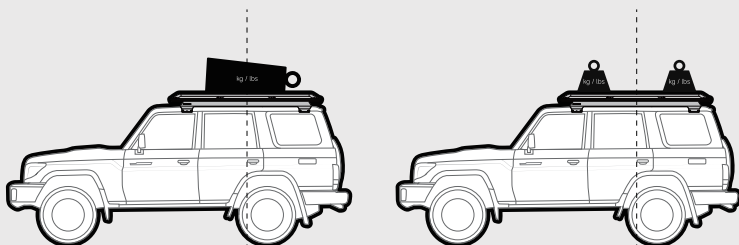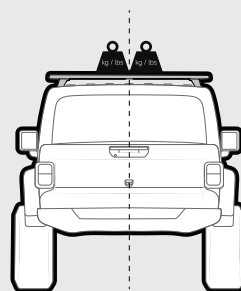


Loading: Avoid concentrating weight at the front or rear.

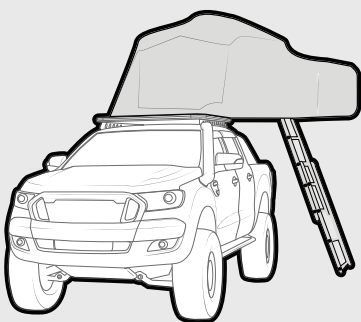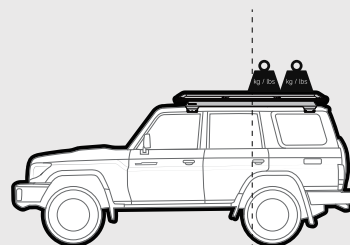

Use extra caution when climbing above 1.2m or 4 ft.

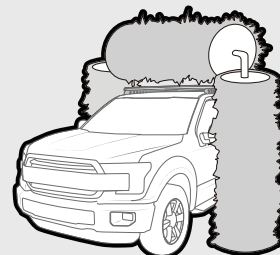

Remove the roof rack and accessories before automatic car washes.

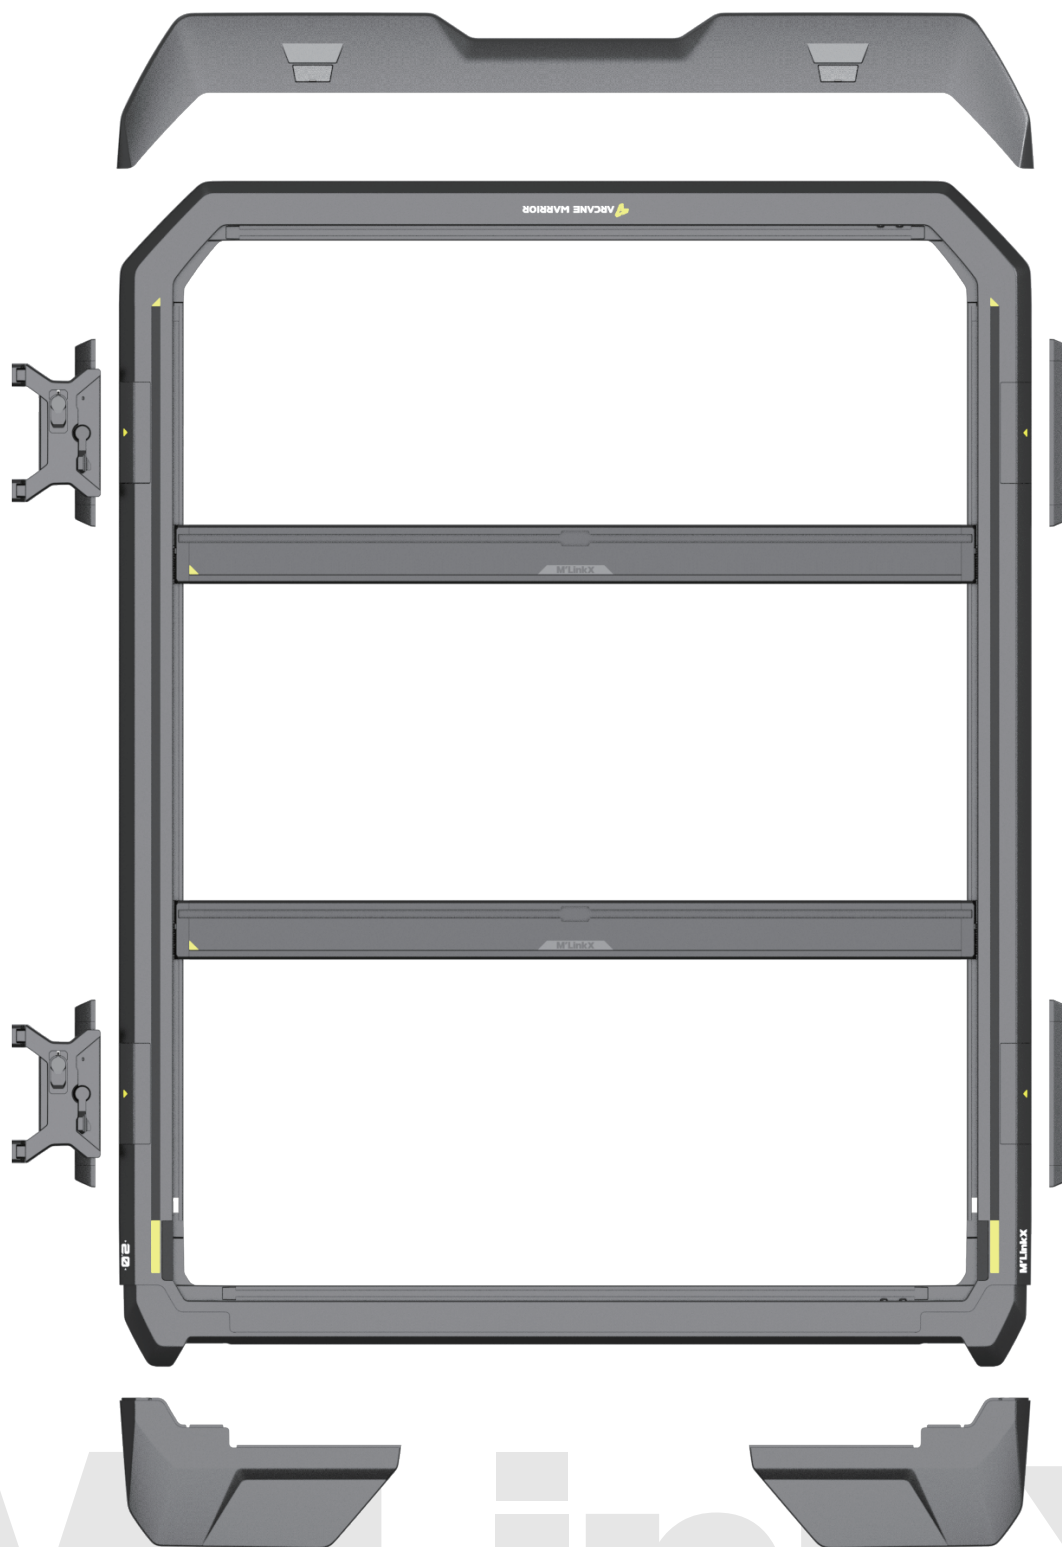


M'LinkX

This model is the M'LinkX S2 version and features AW's flagship Arboris structural architecture across the entire series.


Tools & Parts (Prado / 普拉多)

Roof Rack Platform

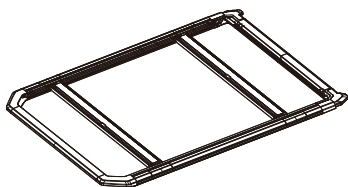

A x1

Mounting Brackets (Front, Rear, Left, Right)

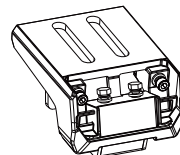


B x4

Mounting Bracket Covers




C x4

M8 ×20 mm Square Head Screws




D x8

Double-Hole Washer




E x4

M8 Lock Nut




F x8

Hex Key Wrench




G x1

Open-End Wrench

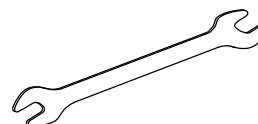

H x1

Combination Wrench



I x1

Installation Tips

This guide applies to the M'LinkX Roof Rack Platform S1 and S2 versions. Components beyond the roof rack must be purchased separately.



03

Installation Step Guide




Scan the QR code with your phone to watch the installation video.

- 1** Slide 4 M8 ×20 mm square head screws into the bottom of each side of the roof rack.

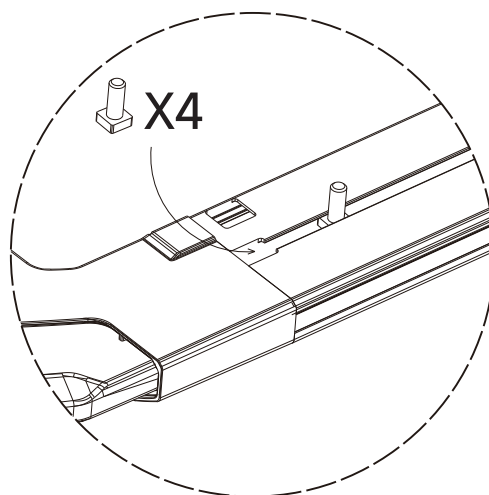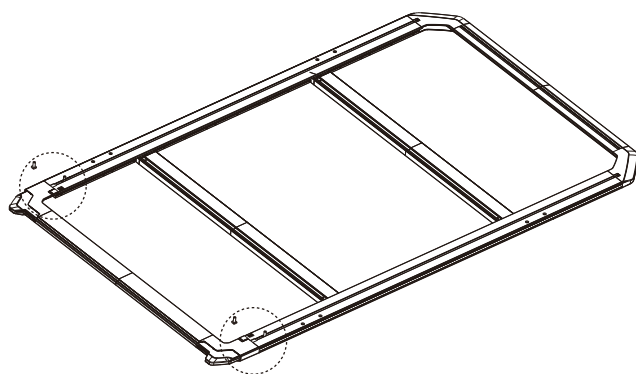


- 2** Take out 4 mounting brackets, making sure to distinguish front, rear, left, and right.

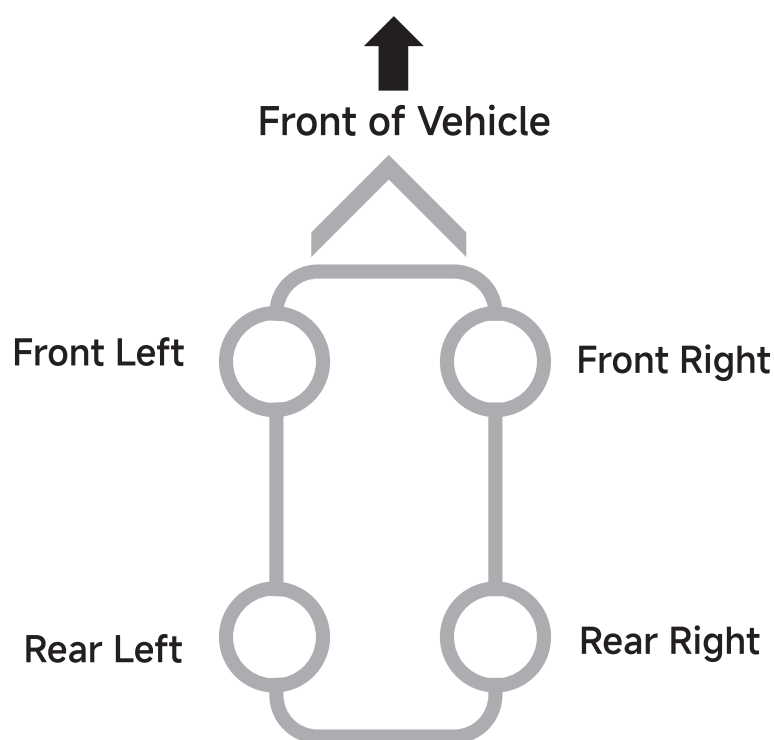


3

As shown, loosen the screws on the mounting brackets without removing them completely.

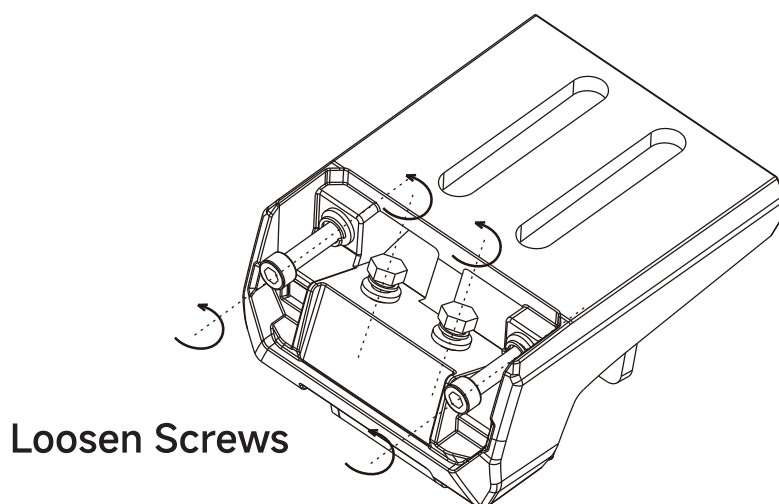


4

Install the 4 mounting brackets on the bottom of the roof rack according to the labels, 2 on each side, making sure to distinguish front, rear, left, and right.

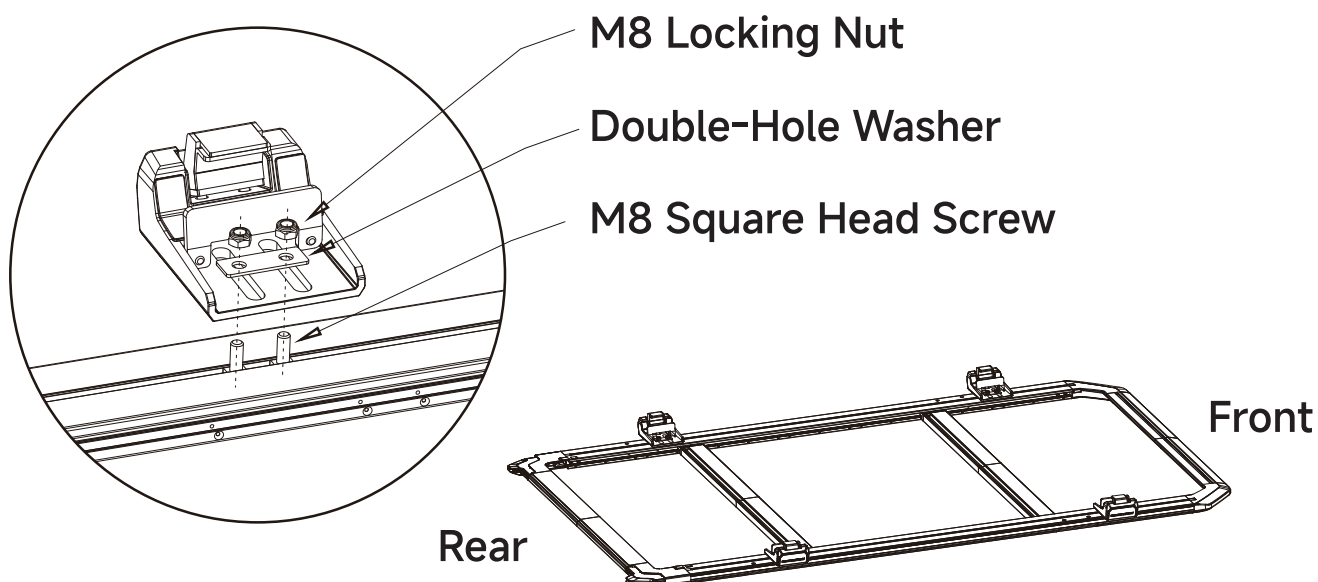


5

Lift the roof rack onto the vehicle, aligning the front and rear positions according to the dimensions below.

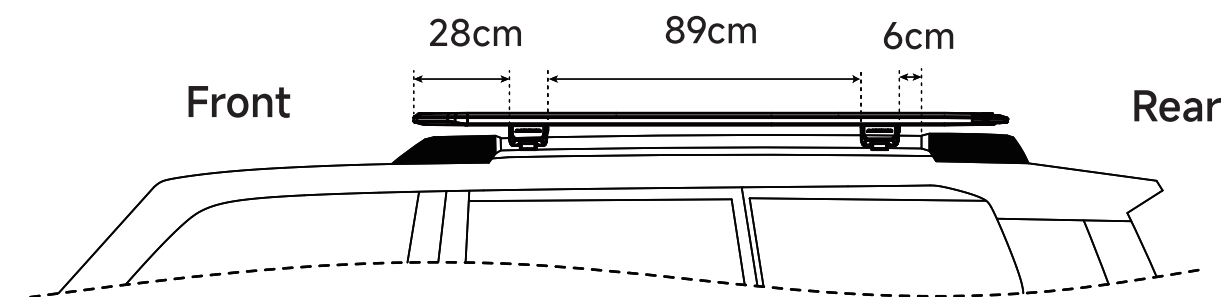


6

Adjust the roof rack to ensure it is centered on the vehicle roof.

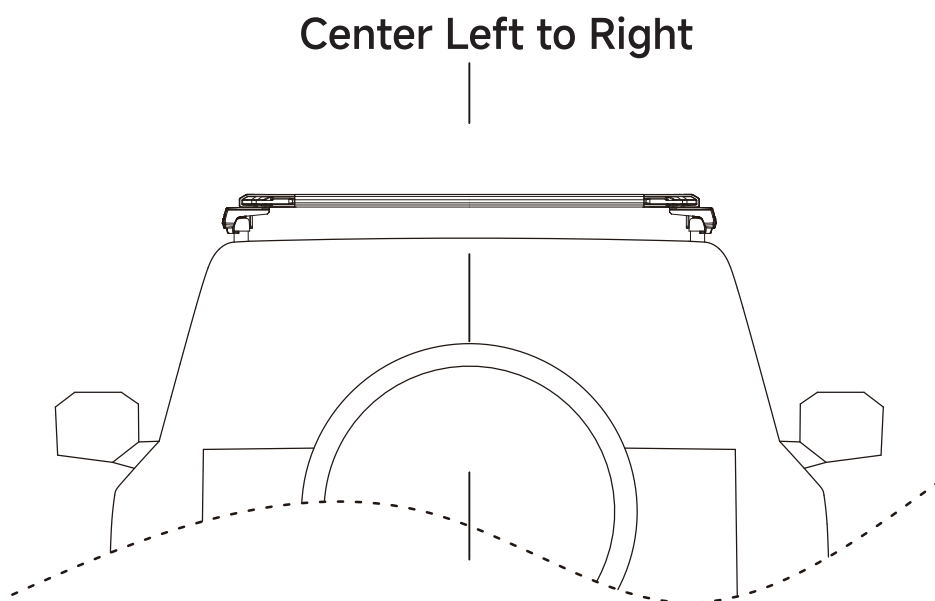


7

Clamp the mounting brackets onto the vehicle's roof rails and tighten the screws.

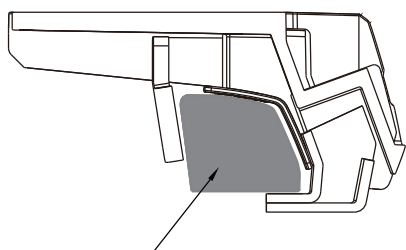


Mounting Brackets: Clamp onto Vehicle Roof Rails

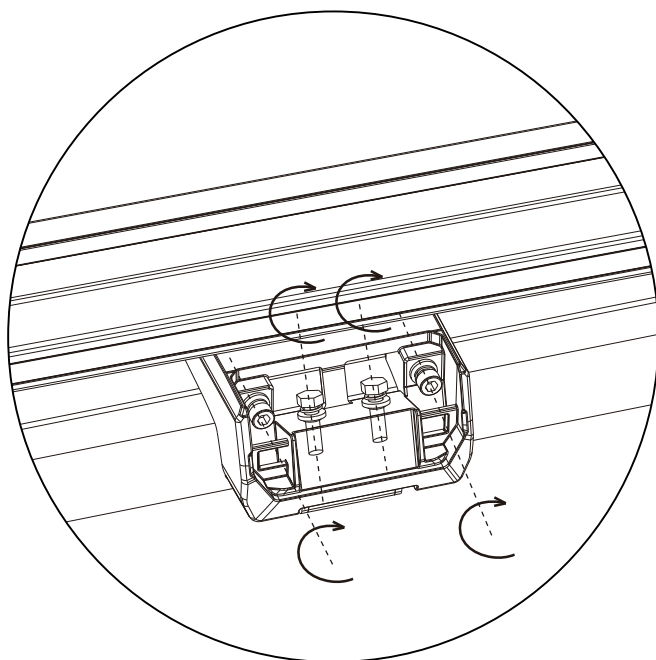

Recommended tightening torque: 6–7 N·m

8

Tighten the nuts that secure the brackets to the roof rack.

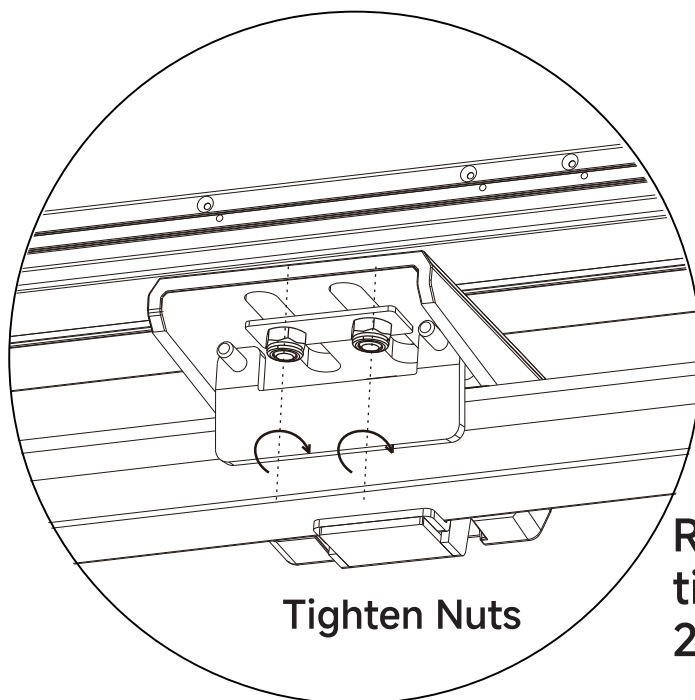


Tighten Nuts

**Recommended
tightening torque:
20–21 N·m**


9

Install the 4 cover caps onto the brackets from the outside, one by one.

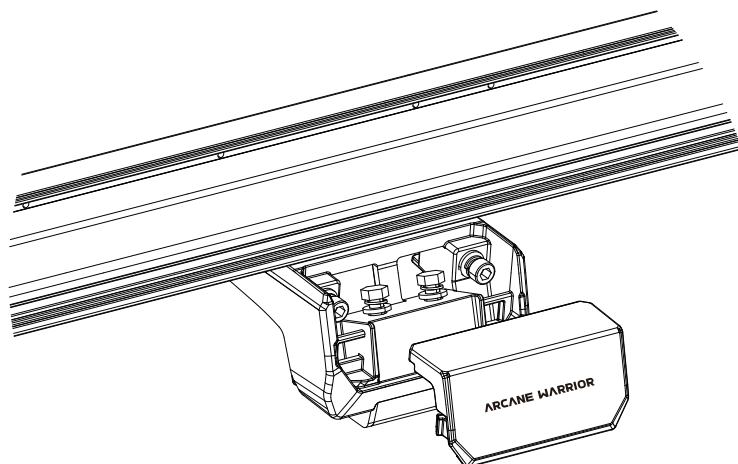

10

Installation Complete.

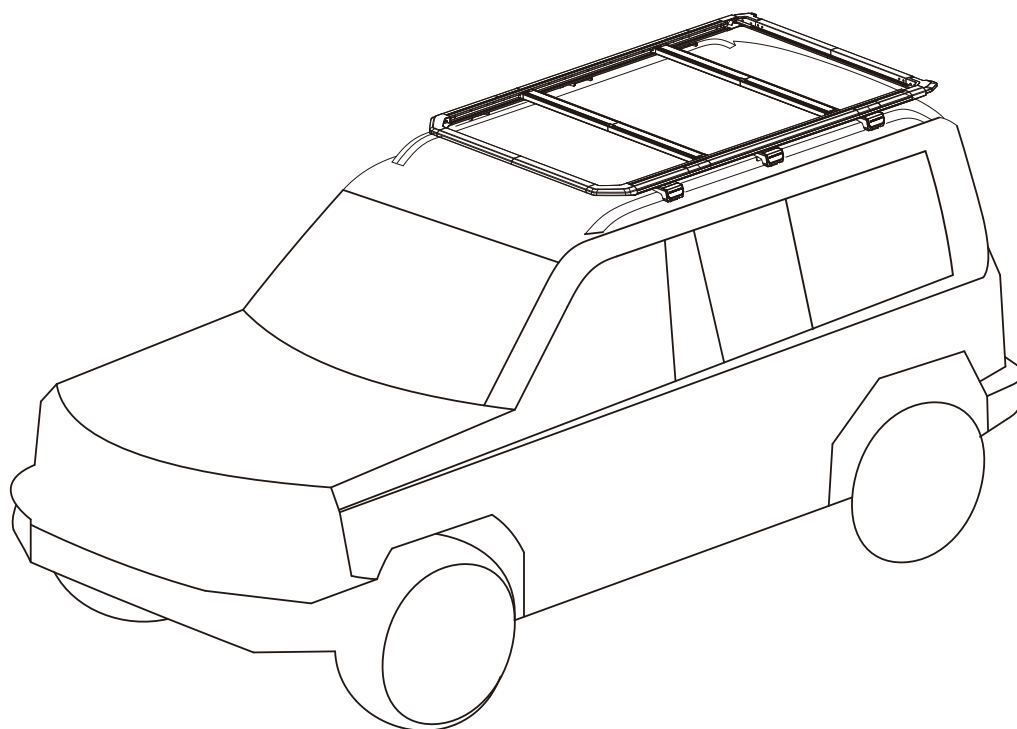

⚠ Troubleshooting Guide

- Noise, looseness, or movement: Check the torque of fasteners, bracket alignment, and roof rack positioning. If necessary, retighten using a cross pattern as shown in Steps 1–10 of the diagram.
- Stripped threads: Replace the fasteners; if needed, replace the related brackets.
- Surface issues: Stop use immediately and contact support if there is severe structural damage.
- Stop use and contact support in the following cases: structural cracks, deformed fastening points, inability to reach torque, or persistent loosening.

⚠ Regulations and Warranty Information

- Follow local traffic and load regulations. Do not exceed speed limits or load capacity.
- Warranty terms are based on the latest version published through AW official channels.



Company : ARCANE WARRIOR Limited
ADD : 111 Qian Jin Rd,Danyang,Jiangsu,China
Phone number : 4001031167
15189151869
Email : peiji@arcanewarrior.com.cn
Global Business Team Tel : +86-15189151869
Email : info@arcanewarriorglobal.com



<https://arcanewarrior.us>